

7 Pole

 
 
Type
A7-INT

Arrangement
C-CPPTTT

STP Test Plug

Part #: STP-01GB2320

ITS Test Block Part #: ITS-01GB2310

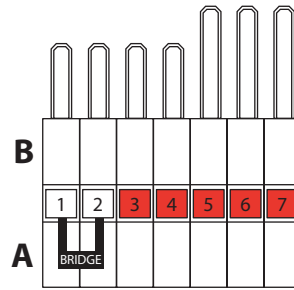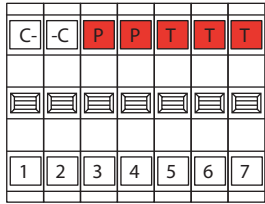



Type
B7-INT

Arrangement
C-C-C-CTTT

STP Test Plug

Part #: STP-01GM0320

  ITS Test Block Part #: ITS-01GM0310

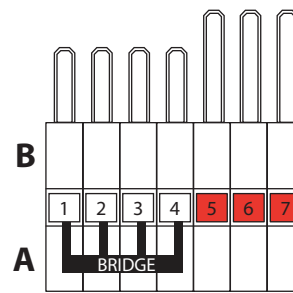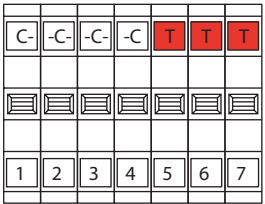



Type
E7-INT

Arrangement
PPPPTTT

STP Test Plug

Part #: STP-01GA4320

  ITS Test Block Part #: ITS-01GA4310

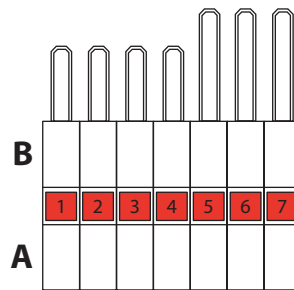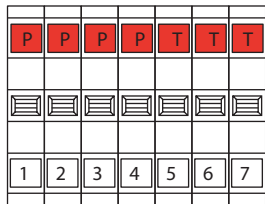

KEY

C = Current P = Potential T = Trip (DC Signal) - = Bridge

 
If test block is required with cover, replace last digit of part number for dust cover type:

-0 (no dust cover) -2 (metal, light gray) -3 (see-through plastic)


14 Pole

Type **A14-INT** Arrangement **PPPPPPPTTTTTT**

ITS Test Block Part #: ITS-01GA8610

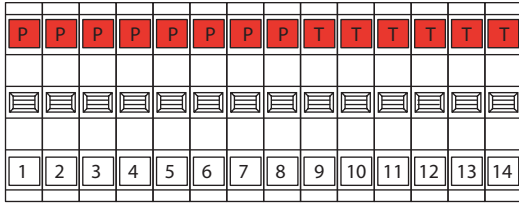


STP Test Plug Part #: STP-01GA8620

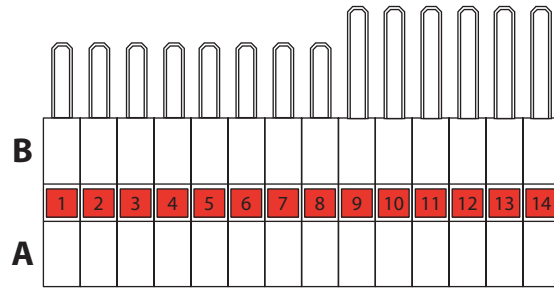 


Type **B14-INT** Arrangement **C-C-C-CPPTTTTTT**

 ITS Test Block Part #: ITS-01GM4610

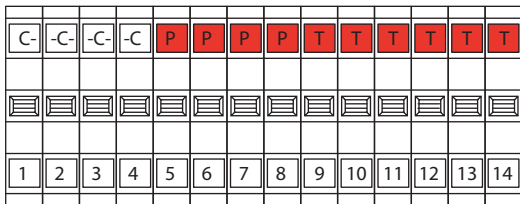


STP Test Plug Part #: STP-01GM4620

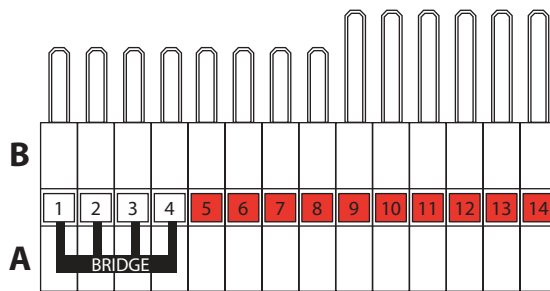 


Type **C14-INT** Arrangement **C-CC-CC-CTTTTTT**

 ITS Test Block Part #: ITS-01GE0610

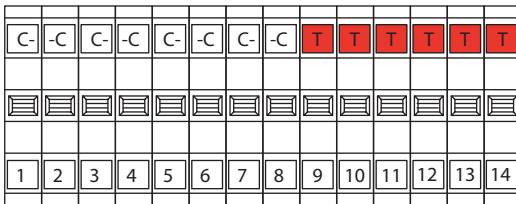

STP Test Plug Part #: STP-01GE0620

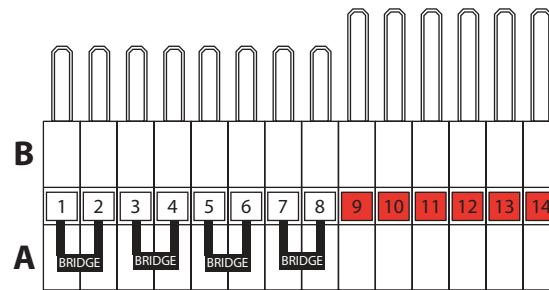 

KEY

 
C = Current P = Potential T = Trip (DC Signal) - = Bridge

If test block is required with cover, replace last digit of part number for dust cover type:
 -0 (no dust cover) -2 (metal, light gray) -3 (see-through plastic)


19 Pole

Type Arrangement
B19-INT C-C-C-CP P P P P T T T T T T T T T T

ITS Test Block Part #: ITS-01GM5A10

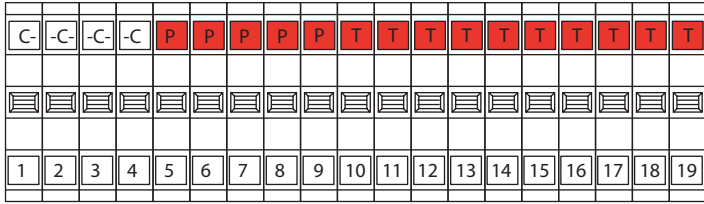


STP Test Plug Part #: STP-01GM5A20

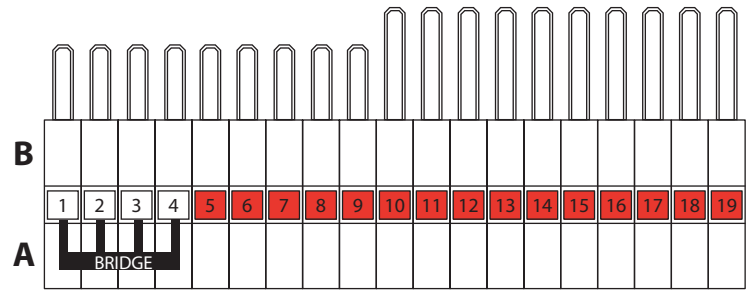 


Type Arrangement
C19-INT C-C-C-CC-CC-C P T T T T T T T T T T

 ITS Test Block Part #: ITS-01GE1A10

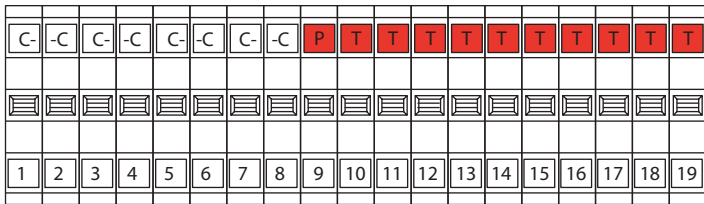


STP Test Plug Part #: STP-01GE1A20

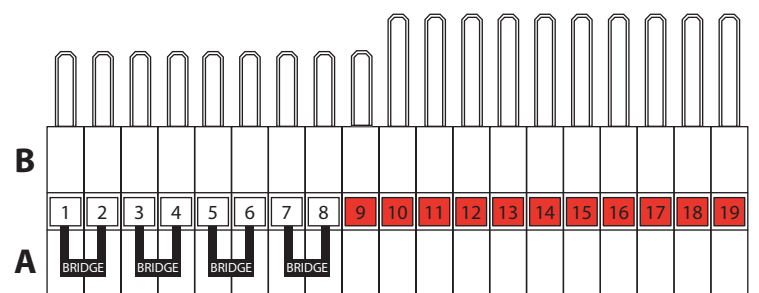 


Type Arrangement
F19-INT C-C-C-CC-C-C-C P T T T T T T T T T T

 ITS Test Block Part #: ITS-01GO1A10

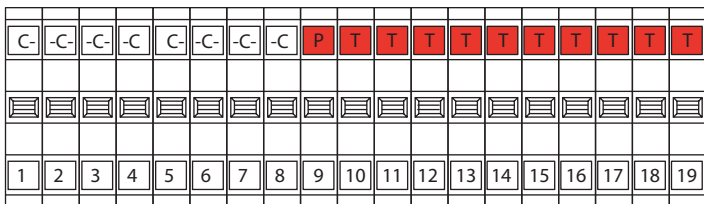


STP Test Plug Part #: STP-01GO1A20

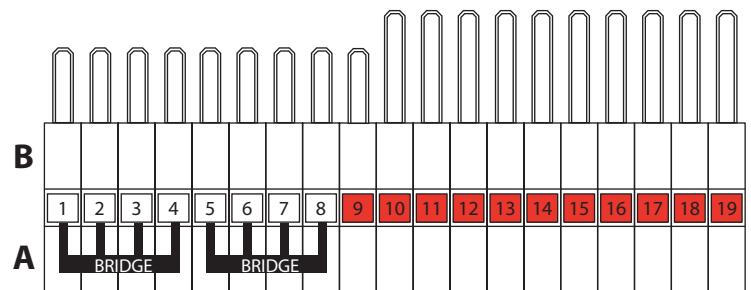 


Type Arrangement
G19-INT C-C-C-CC-C-CC-CC-C-C C-C T T T T T T

 ITS Test Block Part #: ITS-01GR0510

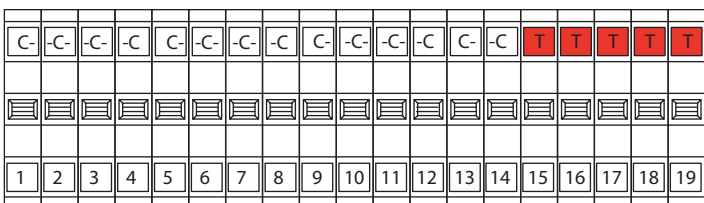

STP Test Plug Part #: STP-01GR0520

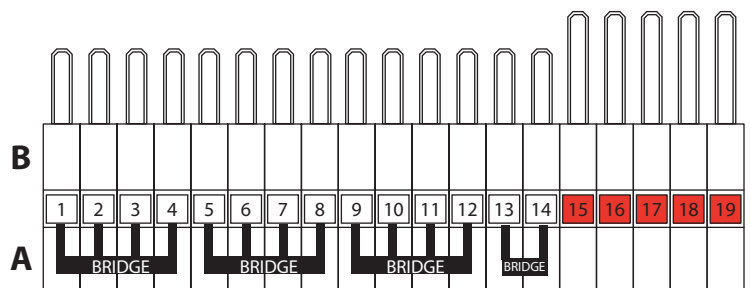 

KEY

 
C = Current P = Potential T = Trip (DC Signal) - = Bridge

If test block is required with cover, replace last digit of part number for dust cover type:
 -0 (no dust cover) -2 (metal, light gray) -3 (see-through plastic)


19 Pole

Type Arrangement
H19-INT C-CC-CC-CC-CP PPP T T T T T T T

ITS Test Block Part #: ITS-01GE4710

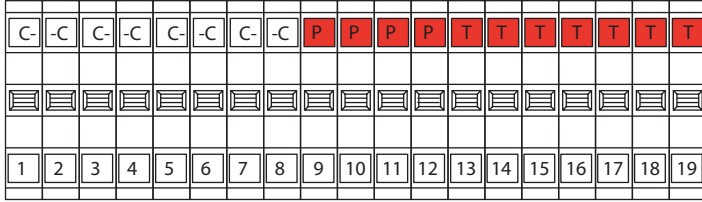

STP Test Plug Part #: STP-01GE4720

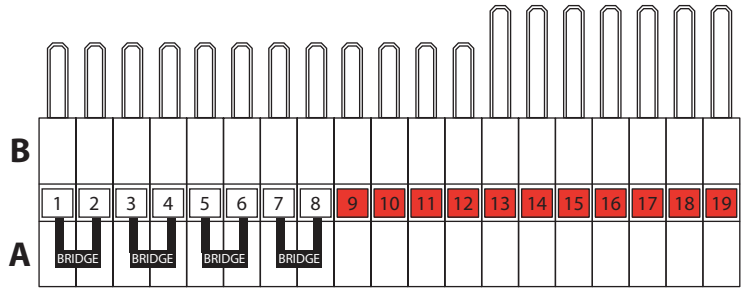 

KEY

C = Current P = Potential T = Trip (DC Signal) - = Bridge

If test block is required with cover, replace last digit of part number for dust cover type:
 -0 (no dust cover) -2 (metal, light gray) -3 (see-through plastic)